


ANTI-ATTACK PERSONAL ALARM SYSTEM & SECURITY LED LIGHT

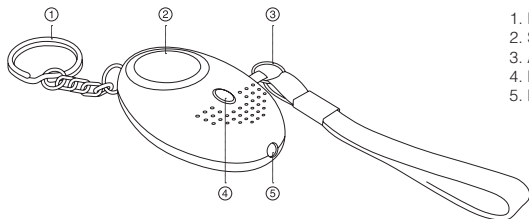

1. Keychain
2. Siren Speaker
3. Alarm Pin and Strap
4. LED On/Off Button
5. LED Light

Please read through the following instructions carefully before using your device to ensure effective usage.

IMPORTANT SAFETY INFORMATION

This device has been designed with the highest concern for safety. However, if used improperly, it has the potential for property damage or personal injury. For accident-free operation of your new device, follow these guidelines:

1. Regularly inspect the device and battery for damage or battery residue.
2. If the device has been damaged, stop use immediately.
3. Ensure alarm pin and strap are firmly secured in device.

WARNING: THIS DEVICE IS NOT A TOY. KEEP ALL PARTS AWAY FROM CHILDREN.

Important Information Before Use:

1. Device can only be used for the intended purpose according to the instructions.
2. Do not submerge the device underwater. Do not expose light to liquid, smoke, or steam.
3. Do not use the device in extremely high temperatures or humid environments.

How to Use:


LED Light

1. Press the LED On/Off button to activate/deactivate the LED light.



Activate Siren Alarm

1. Pull the orange alarm pin and strap to activate the alarm.
2. Replace the alarm pin into the side of the device to turn off the alarm.

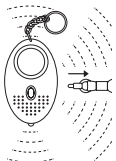

The alarm will continue to sound until the pin is replaced.

Tip: Attach the keychain to bags, purses, or jackets for easy access.

Technical Specifications:

Product Dimensions	90mm x 70mm x 30mm
Product Weight	75g
Batteries Included?	Yes
Batteries Required?	3x AG13/LR44 Batteries